


The **MINI DIGITAL MONITOR PANEL** has four automatic learn features and it will learn:

1. If the Water and Waste Tanks have 1/3 or 1/4 increment sensors.
2. If 2nd Gray Waste Tank exists.
3. If Black Waste Tank exists.
4. If LP Sensor exists.



Each feature above is learned independently, even for the individual Tanks.

Once a feature is learned, it is stored in non-volatile memory, and remembered even if Battery Power is removed from the Panel.

MINI DIGITAL MONITOR has many safe guards to prevent improperly learning of a feature. Should the Panel learn something incorrectly, an option exists on the Panel to reset the original factory default, so that the Panel can re-learn the proper features.

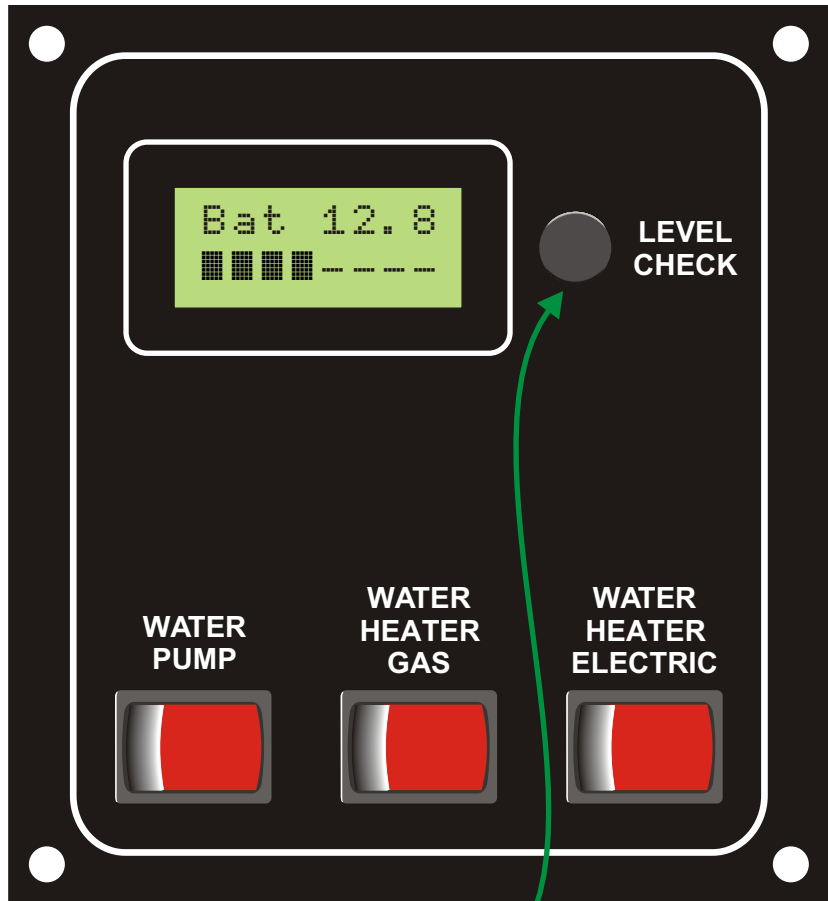

Note: This # will vary depending on your RV Battery Voltage. If less than 12.0, charge your RV Battery.

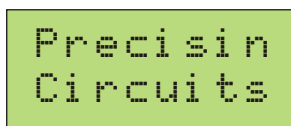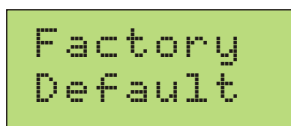

To Reset the Panel to Default:

1. Press the LEVEL CHECK button as many times as needed to get to the above screen. It is easiest to go slow, **Press and Hold** the button each time, and continue to **Hold** once the Bat screen is reached.
2. Once on this screen do NOT let go of button. **Hold** LEVEL CHECK button for approximately 6 seconds. (If you accidentally release the button, go back to step #1.)
3. Once Factory Default screen appears, (shown to the left), release LEVEL CHECK, and quickly press and release button again.
4. If done properly, screen to the left should appear. Factory Default settings have been reset and Panel is going through Power-up screen. If not, go back to step #1.